


# LAN CONTROLLER

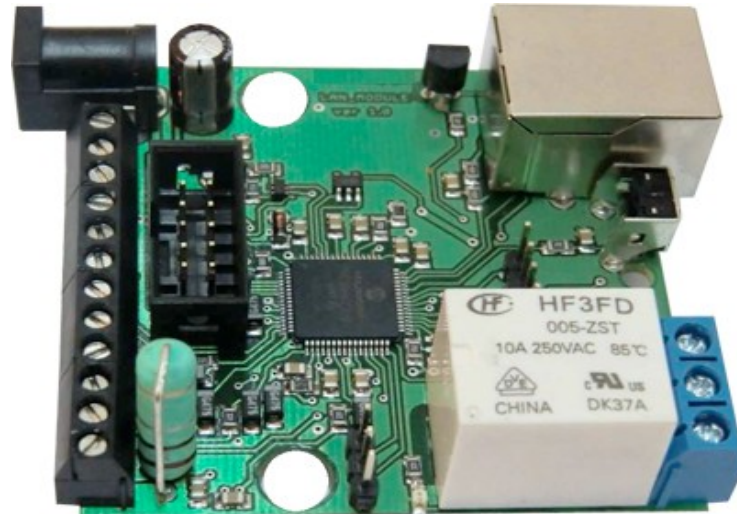

## **RESTARTER, MONITOR, WATCHDOG, CONTROLLER**

### **FEATURES:**

- WWW or SNMP v2 management.
- firmware upgrade via TFTP
- read data in real time without refresh page
- possibility switch on/off to 5 relay direct from page WWW
- events panel to self-programming by user
- Scheduler (switch on/off output for definite time in week days)
- Watchdog IP to five IP device
- monitoring of additional devices eg. sensors
- measurement: environment temperature, supply voltage, temperature and current from connected sensors
- power measurement for DC voltage
- possibility connection of the additional board with RJ45 ports (4 LAN Input, 4 LAN + PoE) or additional board with 4 relays
- Set time manually or by server NTP
- Possibility sensors calibration
- steering frequency and duty PWM
- e-mail notification about programmed events
- SNMP TRAP notification about programmed events
- Automatic send SNMP TRAP with state or value inputs
- implement protocols: HTTP, SNMP, SMTP, SNTP, ICMP, DNS, DHCP.
- service temperature sensors: NTC10K B=3950, KTY-84, PT1000

**Default user and password is „admin”, IP address is 192.168.1.100**

## **TECHNICAL SPECIFICATIONS**

- supply voltage: 8-36V (from 6V if don't use measurement current and PT1000)
- power consumption : about 1W
- PoE supply: YES, passive
- Protection from wrong supply polarization: YES
- interface: ethernet 10Mbit/s
- relay: 255VAC 10A
- work temperature: -20 do +85 st. C
- weight 45g (without casing)
- casing type Z-67 (not included)
- dimensions 57x67mm

### ***INPUT/OUTPUT:***

- 1 RELAY to switch on/off/ another devices, available contact: NC and NO
- 4 OUTPUT to switch relays, ports PoE or another devices;
- 1 STEERABLE OUTPUT PWM from 2,6 KHz to 4Mhz;
- 2 LOGICAL INPUT (max 12V): to monitoring another devices, eg. bufor supply.  
collaboration with outputs: OC,NO, NC
- **5 ANALOG INPUT:**

INP1: temperature measurement witch thermistor NTC 10K B=3950( from -40 to +120 °C) or thermistor KTY-84-130 (from -40 to +300°C), accuracy 1 °C (dependent on NTC)


INP2: thermistor NTC 10K or voltage mesurement to 3,6V, with use additional divider increase range..

INP3: voltage measurement to 35V, accuracy +- 0,1V;

INP4: temperature measurement by PT1000 (from -20 to +850 °C) accuracy +- 2°C;


INP5: measurment DC current to 3A, accuracy +- 10mA;

# PINS and COMPONENTS DESCRIPTION

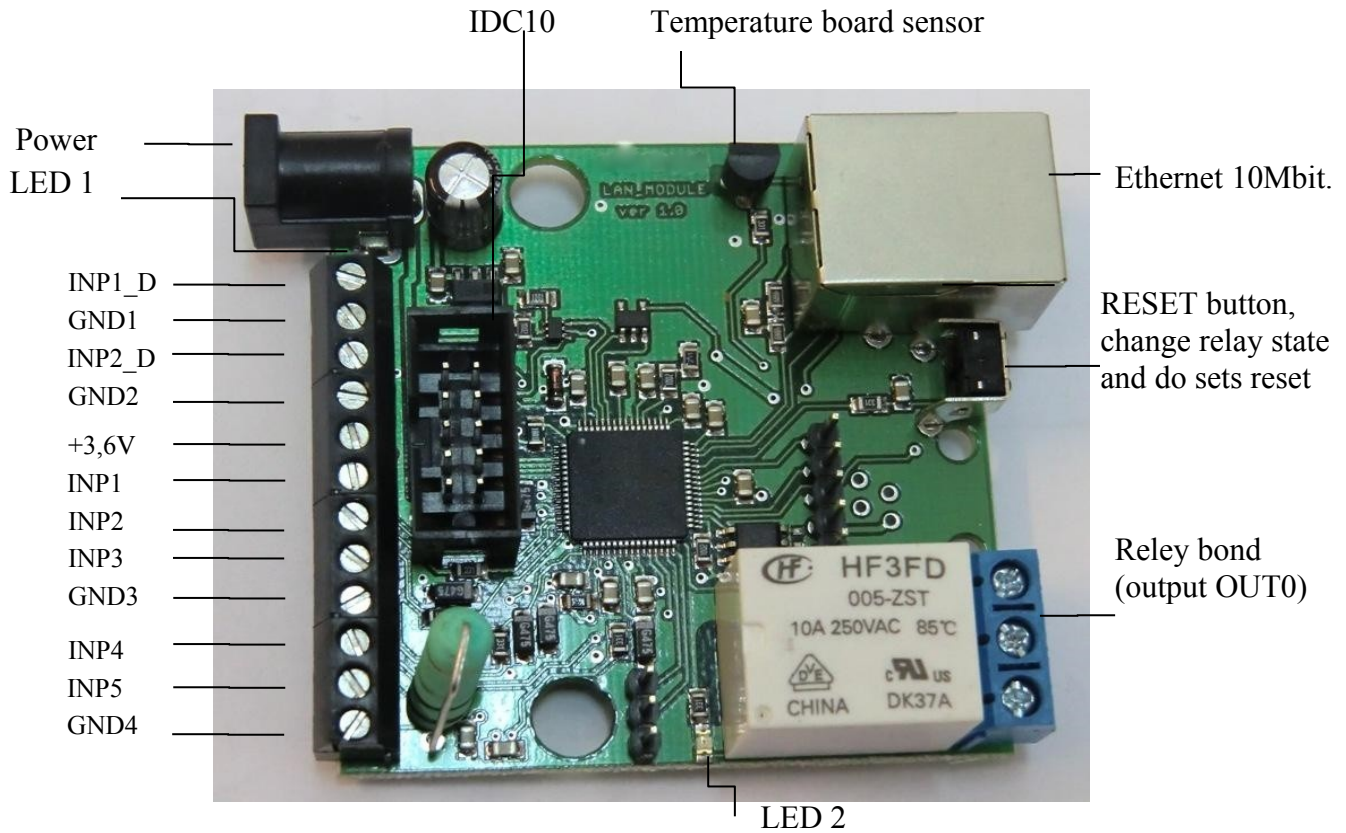

| PIN/Component     | Description   |
|-------------------|---|
| <b>Power</b>      | Power suply 8V-35VDC or via PoE   |
| <b>RELAY bond</b> | To connect external device, <a href="#">detail description below</a>        |
| <b>LED1</b>       | Shine LED means Power on board  |
| <b>LED2</b>       | Shine LED means relay active  |
| <b>IDC10</b>      | To connect additional board , <a href="#">detail description below</a>      |
| <b>INP1_D</b>     | Logical input 1   |
| <b>GND1</b>       | gnd for INP1_D and INP2_D or general gnd                                    |
| <b>INP2_D</b>     | Logical input 2   |
| <b>GND2</b>       | general gnd   |
| <b>+3,6V</b>      | Supply for sensors NTC-10K and KTY-84 connected to INP1 or INP2             |
| <b>INP1</b>       | input for sensor NTC-10K or voltage measurement max (without divider ) 3,6V |
| <b>INP2</b>       | input for sensor NTC-10K Or KTY-84-130                                      |
| <b>INP3</b>       | input for voltgae measuerment max 35V                                       |
| <b>GND3</b>       | general gnd   |
| <b>INP4</b>       | input for sensor PT1000 or connected the same sensor in solar controller    |
| <b>INP5</b>       | Input for current measurement   |
| <b>GND4</b>       | Gnd for current measurement Or general if don't measurement current         |


## Relay Bond:

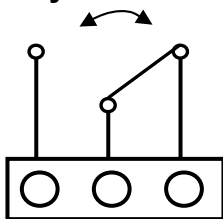

NO – contact normaly open  
 CON – common contact  
 NZ – contact normaly closed

**ATTENTION:** In spite of that relay can switch AC voltage 255 VAC 10A, board fail to comply with safety requirements (lack housing, earthing). Therefore that receiver connect with the assistance safety external relays eg. on DIN bus, controlled by relay on board.

### **IDC10**

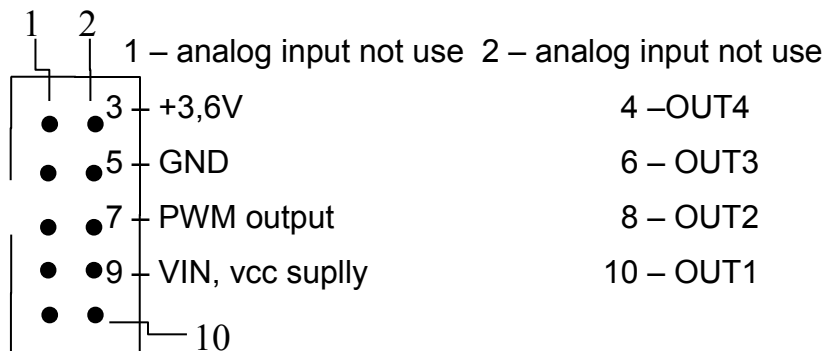

### **RESET BUTTON**


Push about 0,5 second cause change relay state on opposite, push and keep longer about 5 second (if we not logged by WWW on modul) cause modul reset, next if you still keep button about 10 second cause set all settings to default. Set all settings to default confirmation is fast switch relay on/off (klik-klik), don't wrong this with change relay state about 0,5s and switch relay off after restart.

**User and password: admin**


IP: 192.168.1.100

## Sensors connect

### 1. Current measurement.

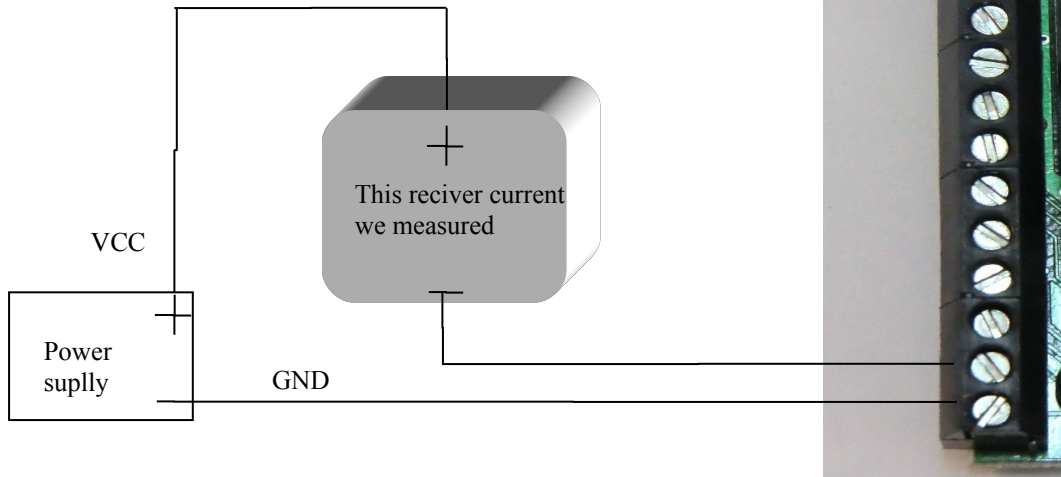


### 2. Temperature measurement and logical input.

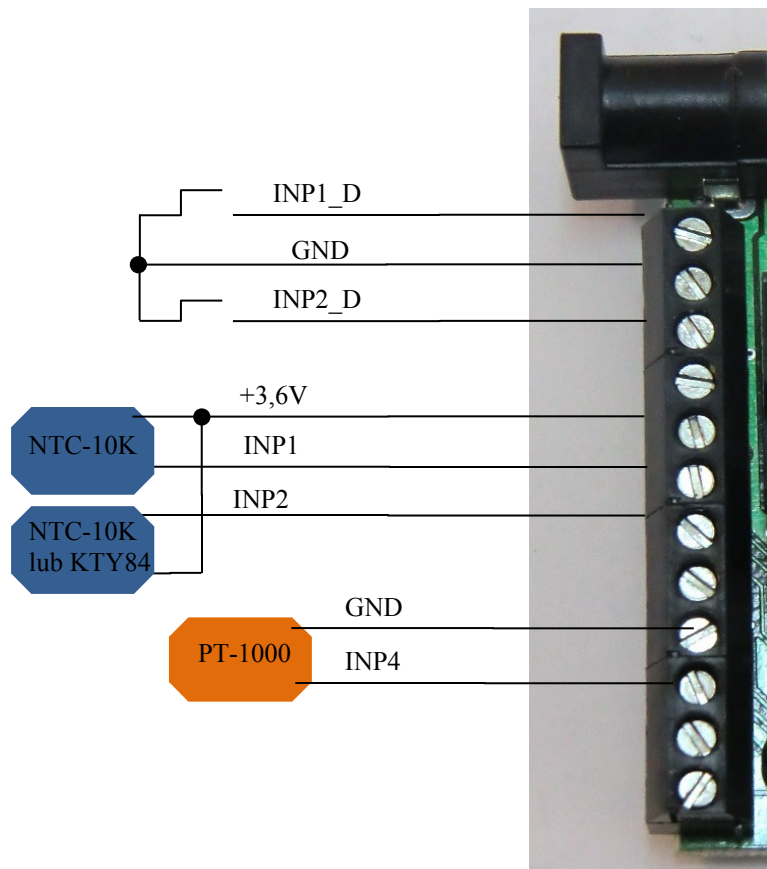

### 3. Voltage measurement.

INP1 is use to temperature measure or voltage, in control panel you must choice what you want measure

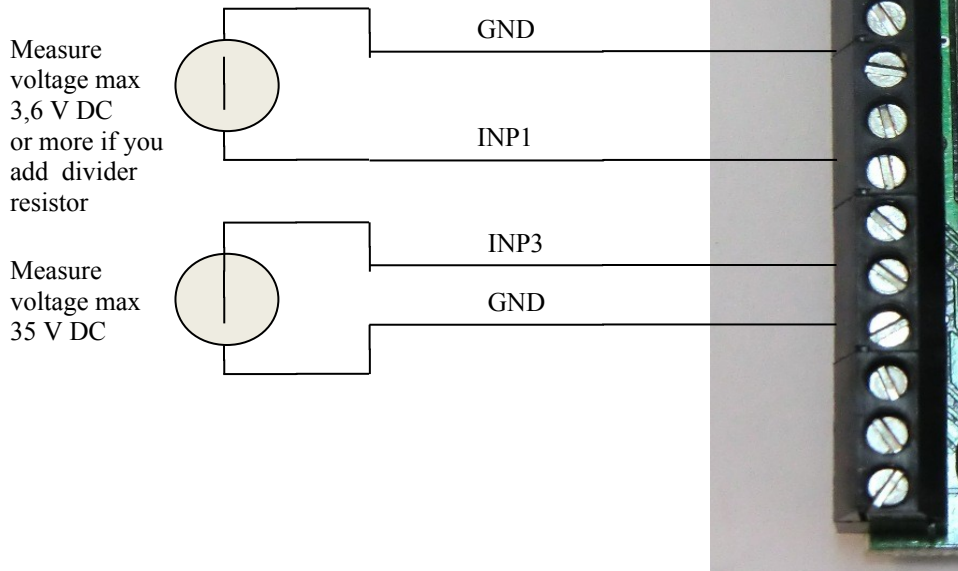

#### Additional resistor to increase measure range INP1




R = 10K increase range 2 (multiplier 2) that is  $3,6V \times 2 = 7,2V$

R= 20 K increase range 3 (multiplier 3)

R= 30 K increase range 4 (multiplier 4) etc.

Add resistor must be connected with set proper multiplier in field VCC on control panel page.

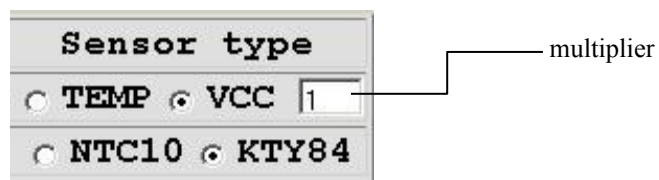

# Management by WWW.

## 1.Control Panel

Change outputs state display

Any text description, max 8 chars

CONTROL PANEL

VCC SUPPLY =8.2 V
Board Temperature= 29.1 °C

### Digital Outputs Control

Reverse out state

Reset time

**|Out0| Out1 | Out2 | Out3 | Out4|**

Out0 Out1 Out2 Out3 Out4

OFF OFF OFF OFF OFF

● ● ● ● ●

1 Off 2 Off 3 Off 4 Off 5 Off

---

**PWM Output OFF**

Frequency =  Hz 5008

Duty =  % 50.0

### ANALOG Inputs State

| Input | Value | Unit | kal                               | Sensor type  |
|-------|-------|------|-----------------------------------|--|
| Inp1  | N/A   | °C   | <input type="text" value="0.0"/>  | <input checked="" type="radio"/> TEMP <input type="radio"/> VCC <input type="text" value="0"/> |
| Inp2  | N/A   | °C   | <input type="text" value="0.0"/>  | <input checked="" type="radio"/> NTC10 <input type="radio"/> KTY84                             |
| Inp3  | 0.0   | V    | <input type="text" value="0.0"/>  |  |
| Inp4  | N/A   | °C   | <input type="text" value="0.0"/>  | <input checked="" type="radio"/> PT <input type="radio"/> SOLAR                                |
| Inp5  | 0.00  | A    | <input type="text" value="0.00"/> |  |

**Power measure**

|       |       |    |  |                                      |                                      |
|-------|-------|----|--|--------------------------------------|--------------------------------------|
| I3*I5 | 0.00  | W  |  |                                      |                                      |
| P*t   | 0.000 | Wh |  | <input type="button" value="Start"/> | <input type="button" value="Reset"/> |

### DIGITAL Inputs State

|        |        |
|--------|--------|
| Input1 | Input2 |
| HIGH   | HIGH   |

- Push red or green circle to change output state or chose "Set State" button
- Reset time=0 normal outputs work ON/OFF

Klik cause change relay state on opposite (OUT0 relay on board)

Set state All output simultaneously according to combo box

Run PWM generator

Value of calibration

Run Power measure from INP3 (voltage) and INP5 (current)

Chose type connected sensor

Reset time – for 0 normal outputs work (ON/OFF) , for time > 0 output after push button change state and return to state before after the specified time in seconds (max 65534).





## 2.Events Config (events panel)

Delay of set outputs after occur events, in seconds max 65535

| Events Config                           |                               |                               |                               |                               |                               |   |  |                               |
|---|-------------------------------|-------------------------------|-------------------------------|-------------------------------|-------------------------------|---|--|-------------------------------|
| INPUTS                                  | OUTPUTS/ACTION                |                               |                               |                               |                               |   |  |                               |
| HYSTERESIS                              | OUT0                          | OUT1                          | OUT2                          | OUT3                          | OUT4                          | PWM   | E-MAIL                                 | SNMP TRAP                     |
| TEMP <input type="checkbox"/> 0.0       | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text0  | <input type="checkbox"/> 0.0  |
| VCC SUPPLY <input type="checkbox"/> 0.0 | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text1  | <input type="checkbox"/> 0.0  |
| INP1 °CV <input type="checkbox"/> 0.0   | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text2  | <input type="checkbox"/> 0.0  |
| INP2 °C <input type="checkbox"/> 0.0    | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text3  | <input type="checkbox"/> 0.0  |
| INP3 V <input type="checkbox"/> 0.0     | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text4  | <input type="checkbox"/> 0.0  |
| INP4 °C <input type="checkbox"/> 0.0    | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0  | <input type="checkbox"/> 0.0 Hz<br><input type="checkbox"/> 0.0 %   | <input type="checkbox"/> 0.0<br>text5  | <input type="checkbox"/> 0.0  |
| INP5 A <input type="checkbox"/> 0.00    | <input type="checkbox"/> 0.00 | <input type="checkbox"/> 0.00 | <input type="checkbox"/> 0.00 | <input type="checkbox"/> 0.00 | <input type="checkbox"/> 0.00 | <input type="checkbox"/> 0.00 Hz<br><input type="checkbox"/> 0.00 % | <input type="checkbox"/> 0.00<br>text6 | <input type="checkbox"/> 0.00 |
| INP1 DIG <input type="checkbox"/>       | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/> 0.00 Hz<br><input type="checkbox"/> 0.00 % | <input type="checkbox"/> text7         | <input type="checkbox"/>      |
| INP2 DIG <input type="checkbox"/>       | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/>      | <input type="checkbox"/> 0.00 Hz<br><input type="checkbox"/> 0.00 % | <input type="checkbox"/> text8         | <input type="checkbox"/>      |

Save Config

ON/OFF input

Value when given output will be set ON Or generator PWM start or send e\_mail or SNMP Trap

If check, given output will be set when value input increase

Save settings (ON/OFF input you don't must save)

If check, means that is ON

Email text that will be send if events occurrence, max amount char is 79. Chars „=" and „& are not allowed

Value of hysteresis

For logical input INP1D and INP2D, e-mail and SNMP Trap notification are send when input level change from 1 to 0 or 0 to 1, additional to email text (at end) will be add value 1 or 0 mark actual input state.

## Config events description:

Example:

For INP1 field OUT0 is set to 20 and checkbox is check, the same values are set in field E\_MAIL. Beginning value INP1 is 10, after certain time temperature increase and value INP1 is 20 or more, in this moment OUT0 will be ON (if was OFF) and email message will be send. After certain time temperature decrease, if decrease above 20 OUT0 will be OFF (if was ON), if temperature again exceed 20, email message will be send again and OUT0 will be ON.

## 3.Watchdog

**WatchDog**

Enable IP0  
IP0 168.1.10.10 OUT0:  ON |  OFF |  RESET= 768 s | PING Failures 2

Enable IP1  
IP1 168.1.10.10 OUT1:  ON |  OFF |  RESET= 768 s | PING Failures 2

Enable IP2  
IP2 168.1.10.10 OUT2:  ON |  OFF |  RESET= 768 s | PING Failures 0

Enable IP3  
IP3 168.1.10.10 OUT3:  ON |  OFF |  RESET= 768 s | PING Failures 0

Enable IP4  
IP4 168.1.10.10 OUT4:  ON |  OFF |  RESET= 768 s | PING Failures 0

30 s Wait time - before again ping, after event

Save Config

Time to wait for respond is 4s

When events occur, next ping to this same IPX will be send after this time (max 65535second)

Time to respond is 4 second, after this time one PING failures is counting. In time waiting to respond, another IPX aren't send ping, this may causa stretch time statment that another IPX adress is inaccessible.

Amount PING failures, after this one of three events will be happen:  
set (ON) output,  
set (OFF) output  
reset (ON/OFF) output on definite time (max 65535s).

## 4.Scheduler

**Scheduler**

DATE and TIME: Th-1970-01-01;00:00:10

|                                    |  |                                     |                           |   |
|------------------------------------|--|-------------------------------------|---------------------------|---|
| <input type="checkbox"/> Enable S0 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S1 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S2 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S3 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S4 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S5 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S6 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S7 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S8 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |
| <input type="checkbox"/> Enable S9 | <input type="text" value="0,Mo,00:00:00"/> | <input checked="" type="radio"/> ON | <input type="radio"/> OFF | <input type="radio"/> RESET = <input type="text" value="10"/> |

### Week Day

Mo-Monday, Tu- Tuesday, We- Wednesday, Th- Thursday, Fi- Friday, Sa- Saturday,  
Su-Sunday, ## - all week day

Letter size is important

Format: number output(from 0 to 4),day1,day2,day3,day4,day5,day6, xx:xx:xx(time)

Example:

0,Mo,12:23:00 sets out0 every Monday at 12:23:00

1,Sa;Fi,Mo,23:22:03 sets out1 every Saturday, Friday and Monday at 23:22:03

1,Sa;Fi,Mo,Tu,Su,Th,23:22:03 sets out1 every Saturday, Friday, Monday, Tuesday,  
Sunday and Thursday at 23:22:03

0,##,12:01:30 - sets out0 every week day at 12:01:30

Reset – time in second (max 65535).

# Network Configuration.

## Network Configuration

### Email client settings

|              |   |   |                                 |
|--------------|---|---|---------------------------------|
| SMTP Server: | <input type="text" value="smtp.serwer.pl"/>       | Port:   | <input type="text" value="25"/> |
| User Name:   | <input type="text" value="user"/>                 |   |                                 |
| Password:    | <input type="text" value="user"/>                 |   |                                 |
| To:          | <input type="text" value="user@com.pl"/>          |   |                                 |
| From:        | <input type="text" value="lan_restarter@com.pl"/> |   |                                 |
| Subject:     | <input type="text" value="Lan Restarter Info"/>   |   |                                 |
|              | <input type="button" value="Save Config"/>        | <input type="button" value="Test e-mail send"/> |                                 |

When you change setting press "Save Config" before Test

### Network settings

|                |   |
|----------------|---|
| MAC Address:   | <input type="text" value="00:04:A3:35:08:43"/>        |
| Host Name:     | <input type="text" value="LAN_SWITCH-SENS"/>          |
|                | <input type="checkbox"/> Enable DHCP                  |
| IP Address:    | <input type="text" value="192.168.1.100"/>            |
| Gateway:       | <input type="text" value="192.168.1.1"/>              |
| Subnet Mask:   | <input type="text" value="255.255.255.0"/>            |
| Primary DNS:   | <input type="text" value="192.168.1.2"/>              |
| Secondary DNS: | <input type="text" value="0.0.0.0"/>                  |
|                | <input type="button" value="Save Config and Reboot"/> |

### ACCESS settings

User:

Password:   
 Max char 8

---

### NTP settings

NTP Server:  Port:

Time Interval

Time Zone

---

### SNMP settings

Read Comm1 :

Read Comm2 :

Read Comm3 :

Write Comm1:

Write Comm2:

Write Comm3:

TRAP Enable

Trap Reciver IP

Trap Comm

Time Interval - minuts.

TRAP Enable – enabled send TRAP by SNMP.

### AUTO SEND TRAP settings

Enable Automatic Send TRAP

TEMP

VCC

INP1

INP2

INP3

INP4

INP5

INP1D

INP2D

Time Interval  \* 10s = 0.17m

---

### Date and Time

NTP

Set Manual

Enable Automatic Send TRAP – enable automatic send TRAP by SNMP (above TRAP Enable must be enable)

Time Interval (max value 10555) – period to send TRAP from given INPUT, accuracy 10 s

## **Firmware Upgrade.**

You may upgrade firmware on two ways:

1. By dedicated software „LAN Controller Tools”(find controller or put IP and click „Upgrade Firmware”).
2. By any TFTP client, description below.

Send firmware file by TFTP, you have 5 seconds (Green LED on RJ45 socket blink) to start sending firmware when the module runs after reset (you may cause reset by clicking button „Save config and Reboot” in Network configuration or „Reset” button on board or dedicated software „LAN Controller Tools”). If the start transmission does not happen, the device starts working normally. If TFTP transmission will start, then wait about 90 seconds to finish uploading firmware. After uploading, the device will be reset and start normally.

If you want to upload the upgrade file, choose „Save config and Reboot” in Network configuration or power OFF and power ON the device .

**The file must be sent in binary mode** eg. In Windows XP tftp client  
tftp -i 192.168.1.100 put „file\_upgrade.bin”.



```
C:\>C:\SYSWXP\system32\cmd.exe
C:\>tftp -i 192.168.1.100 put "firmware_lan_1.0.bin"
Przesłano pomyślnie: bajtów: 321664 w 79 ss, bajtów/s: 4071
C:\>_
```

# MIB file to SNMP application

LAN\_MODULE DEFINITIONS ::= BEGIN

IMPORTS

enterprises, IpAddress, Gauge, TimeTicks FROM RFC1155-SMI  
DisplayString FROM RFC1213-MIB  
OBJECT-TYPE FROM RFC-1212  
TRAP-TYPE FROM RFC-1215;

lan\_module OBJECT IDENTIFIER ::= { enterprises 17095 }

product OBJECT IDENTIFIER ::= { lan\_module 1 }

setup OBJECT IDENTIFIER ::= { lan\_module 2 }

control OBJECT IDENTIFIER ::= { lan\_module 3 }

ON-OFF ::= INTEGER { ON(1), OFF(0) }

name OBJECT-TYPE

SYNTAX DisplayString

ACCESS read-only

STATUS mandatory

DESCRIPTION

"Name of product. e.g. PICDEM.net etc."

::= { product 1 }

version OBJECT-TYPE

SYNTAX DisplayString

ACCESS read-only

STATUS mandatory

DESCRIPTION

"Version string. e.g. 1.0"

::= { product 2 }

date OBJECT-TYPE

SYNTAX DisplayString

ACCESS read-only

STATUS mandatory

DESCRIPTION

"Date of version"

::= { product 3 }

out0 OBJECT-TYPE

SYNTAX INTEGER { OFF(1), ON(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"OUT0 output set or read"

::= { control 1 }

out1 OBJECT-TYPE

SYNTAX INTEGER { OFF(1), ON(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"OUT1 output set or red"

::= { control 2 }

out2 OBJECT-TYPE

SYNTAX INTEGER { OFF(1), ON(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"OUT2 output set or red"

::= { control 3 }

out3 OBJECT-TYPE

SYNTAX INTEGER { OFF(1), ON(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"OUT3 output set or red"

::= { control 4 }

out4 OBJECT-TYPE

SYNTAX INTEGER { OFF(1), ON(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"OUT4 output set or red"

::= { control 5 }

temp OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..15))

ACCESS read-only

STATUS mandatory

DESCRIPTION

"Temp value: Air temperature around board"

::= { control 6 }

vcc OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..15))

ACCESS read-only

STATUS mandatory

DESCRIPTION

"VCC value: Input VCC supply board"

::= { control 7 }

inp1 OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..15))



ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Inp1 value: temperature from NTC10 or voltage"  
::= { control 8 }

inp2 OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Inp2 value: temperature from NTC10 or KTY-84"  
::= { control 9 }

inp3 OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Inp3 value: voltage max 35V DC"  
::= { control 10 }

inp4 OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Inp2 value: temperature from PT1000 or PT1000 connected to Solar System Controller"  
::= { control 11 }

inp5 OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Inp2 value: DC current, max 3A"  
::= { control 12 }

i3xi5 OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"I3xI5 value: Power[W] from Input3 [V] and Input5[A]"  
::= { control 13 }

Pxt OBJECT-TYPE  
SYNTAX DisplayString (SIZE (0..15))  
ACCESS read-only  
STATUS mandatory  
DESCRIPTION  
"Pxt value: Energy[Wh] from Input3 and Input5 "

::= { control 14 }

inp1Digital OBJECT-TYPE

SYNTAX INTEGER { HIGH(1), LOW(0) }

ACCESS read-only

STATUS mandatory

DESCRIPTION

"INP1D Digital state"

::= { control 15 }

inp2Digital OBJECT-TYPE

SYNTAX INTEGER { HIGH(1), LOW(0) }

ACCESS read-only

STATUS mandatory

DESCRIPTION

"INP2D Digital state"

::= { control 16 }

traps OBJECT-TYPE

SYNTAX SEQUENCE OF TrapEntry

ACCESS not-accessible

STATUS mandatory

DESCRIPTION

"Trap table"

::= { setup 1 }

trapEntry OBJECT-TYPE

SYNTAX TrapEntry

ACCESS not-accessible

STATUS mandatory

DESCRIPTION

"Single trap entry containing trap receiver info."

INDEX { trapReceiverNumber }

::= { traps 1 }

trapEntry ::=

SEQUENCE {

trapReceiverNumber

INTEGER,

trapEnabled

INTEGER,

trapReceiverIPAddress

IpAddress,

trapCommunity

DisplayString

}

trapReceiverNumber OBJECT-TYPE

SYNTAX INTEGER (0.. 4)

ACCESS not-accessible

STATUS mandatory

DESCRIPTION

"Index of trap receiver"

::= { trapEntry 1 }

trapEnabled OBJECT-TYPE

SYNTAX INTEGER { Yes(1), No(0) }

ACCESS read-write

STATUS mandatory

DESCRIPTION

"Indicates if this trap entry is enabled or not."

::= { trapEntry 2 }

trapReceiverIPAddress OBJECT-TYPE

SYNTAX IpAddress

ACCESS read-write

STATUS mandatory

DESCRIPTION

"Trap receiver IP address"

::= { trapEntry 3 }

trapCommunity OBJECT-TYPE

SYNTAX DisplayString (SIZE (0..7))

ACCESS read-write

STATUS mandatory

DESCRIPTION

"Trap community to be used by agent to send trap"

::= { trapEntry 4 }

END